

Rear Entertainment System*

Models with navigation system

 
See the Navigation System Manual for how to operate the rear entertainment system.

Models without navigation system

Allows the rear passengers to enjoy a different entertainment source, such as DVD, CD, and radio, than the front passengers.

Wireless Headphones


The rear seat passengers can listen to audio from the rear entertainment system by a wireless headphone that comes with your vehicle.

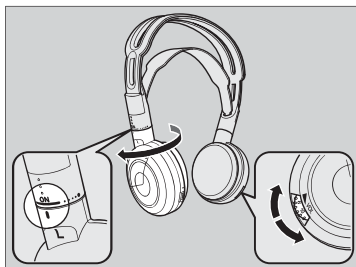

To turn on the switch: Pivot the left earpiece outward.

To adjust the volume: Turn the dial at the bottom of the right earpiece.

 Rear Entertainment System*

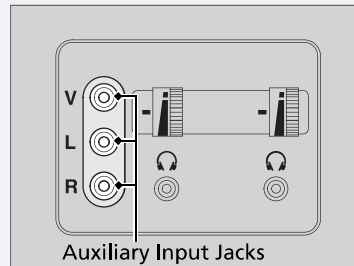

The system also allows for auxiliary inputs from standard video games. The jacks are above the third row seat armrest on the driver's side.

V = Video jack

L = Left audio jack

R = Right audio jack

 
Wireless Headphones

Your vehicle comes with two wireless headphones.

Wear the headphone correctly with the earpiece marked with L goes to your left ear and R goes to your right ear.


Wearing the headphone backward may affect the audio reception.


Overhead Screen

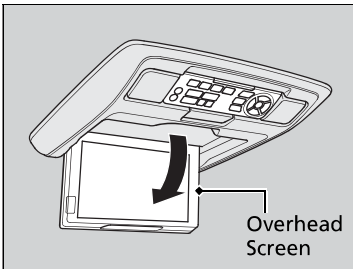

Pull down the screen to the first or second detent until it latches.

Operating the System

 To operate the system, set the power mode to ON or ACCESSORY. Press the **REAR**  (power) button to turn on the system.

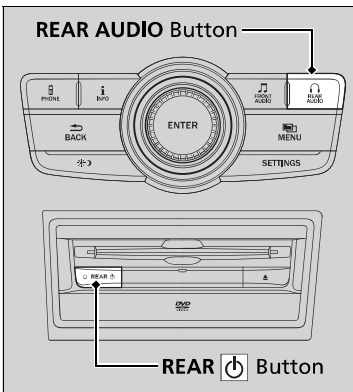

■ **REAR AUDIO button on the front panel**
When you press the **REAR AUDIO** button, the front display changes to what is displayed on the rear overhead screen.

The audio from the front speakers switches to the audio played in the rear.

Overhead Screen

 
You can use the rear control panel as a remote. Press the lock tab to detach it.

NOTICE


This vehicle's overhead mounted video display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose of as hazardous waste.

System Controls and Menu for DVD

Remote with XM button

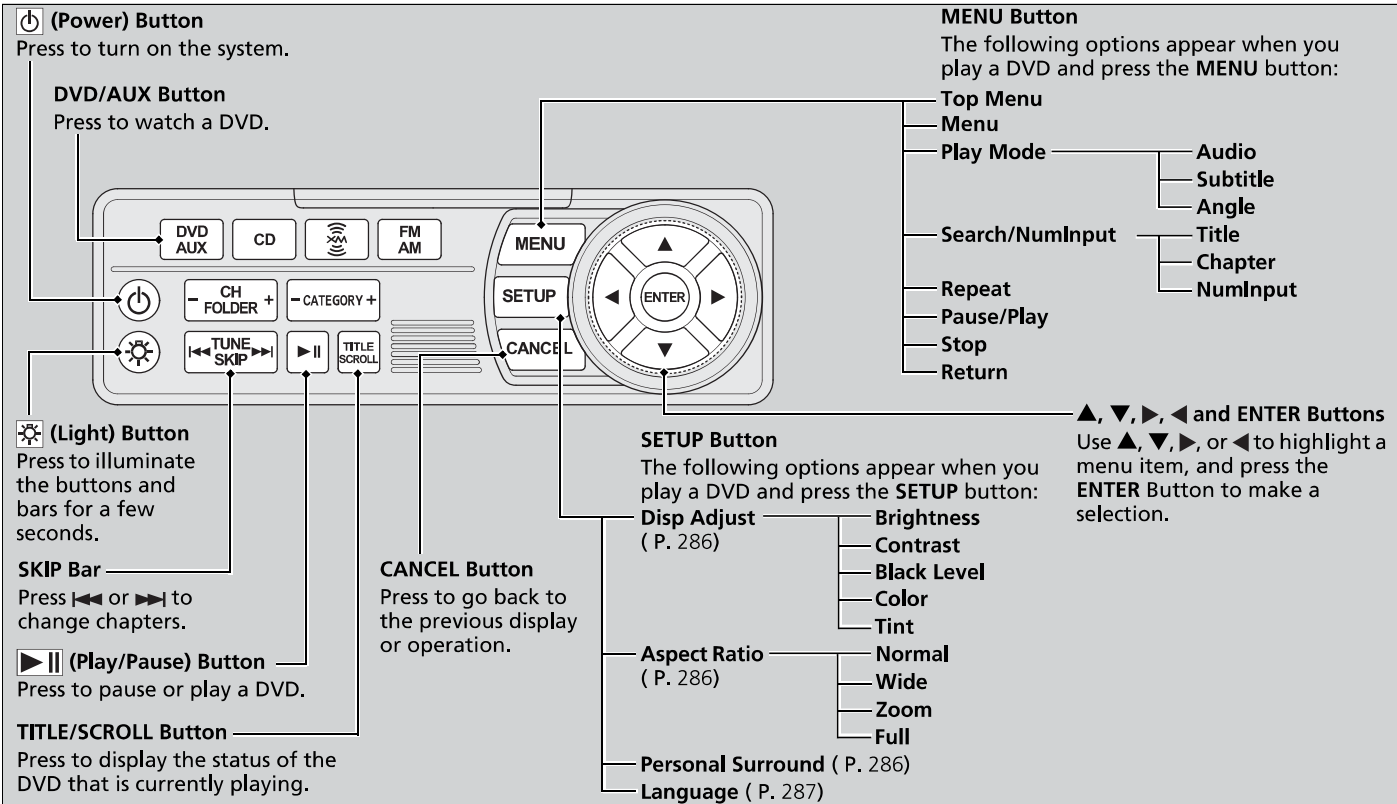

Remote without XM button

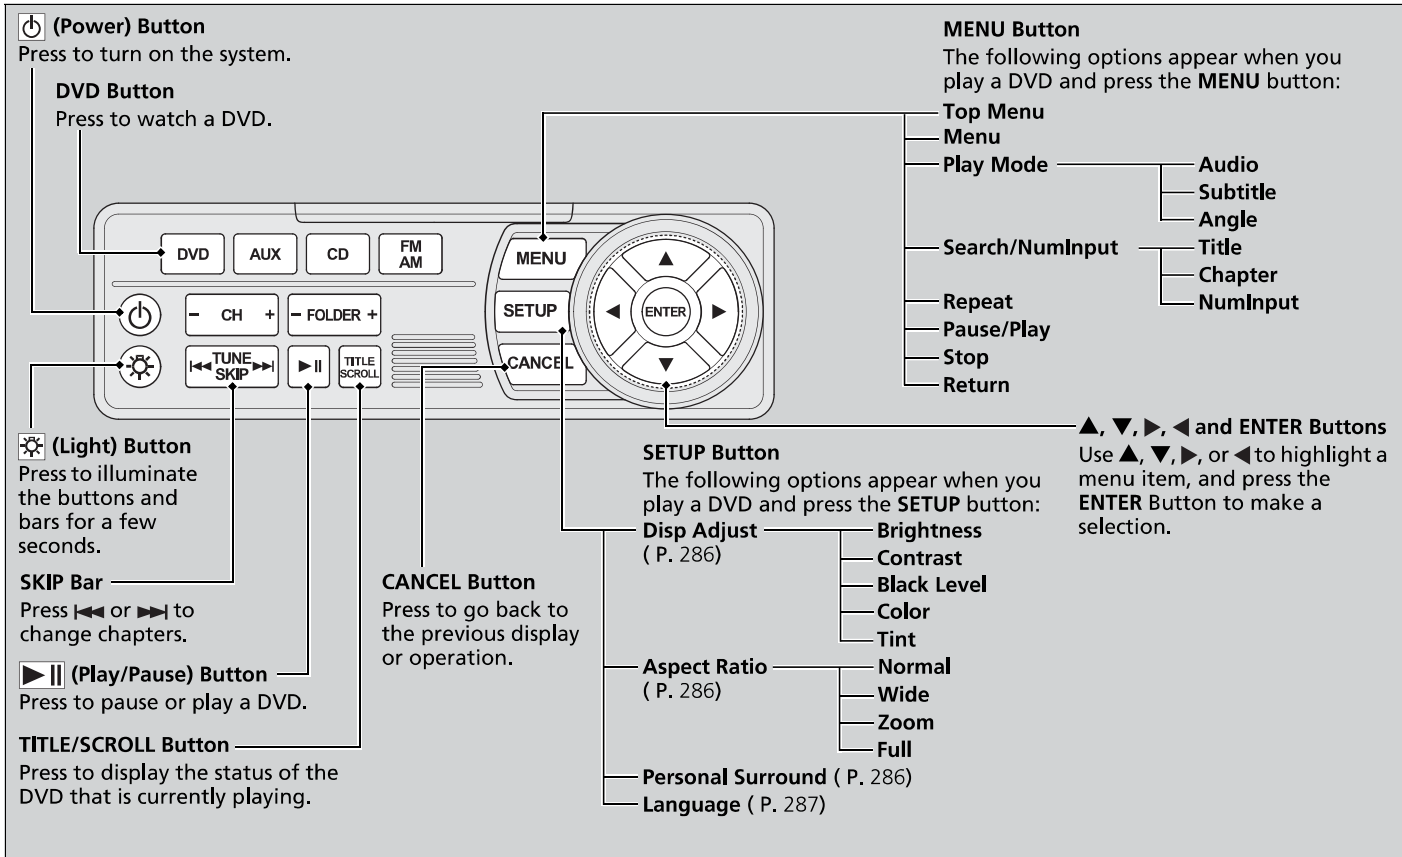 

■ Playing a DVD











- Insert a DVD into the lower slot of the front audio unit.
 - ▶ The system automatically starts the DVD.
- To fast forward, press and hold the ▶▶▶ (SEEK/SKIP) bar, and to reverse, press and hold the ◀◀◀ bar on the front panel or the remote.
- To go to the next chapter, press the ▶▶▶ bar, and to go to the beginning of the current chapter, press the ◀◀◀ bar on the front panel or the remote. Quickly press the ◀◀◀ bar twice to go to the previous chapter.

■ DVD setup from the front panel

Press the **REAR AUDIO** button on the front panel while a DVD is playing.

Audio/Subtitle:

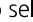Selects a language for audio and subtitles that is available on the DVD.





1. Press the **MENU** button to display **Menu** in front.
2. Rotate  to select **Other Function**, then press .
 - ▶ Repeat the procedure to select **Audio/Subtitle**.
3. Move  and  to select the upper and lower part of the screen.
4. In the upper part, rotate  to select a language for audio, then press .
In the lower part, rotate  to select a subtitle language, then press .
 - ▶ To turn off subtitles, rotate  to select **OFF**, then press .

▶▶▶ Playing a DVD

DVD is available for the rear seat passenger only.









Angle:

Changes the view angle.

1. Press the **MENU** button to display **Menu** in front.
2. Rotate  to select **Other Function**, then press .
 - ▶ Repeat the procedure to select **Angle**.
3. Rotate  to select a desired angle, then press .







Search:

Selects the title or chapter you want to play.

1. Press the **MENU** button to display **Menu** in front.
2. Rotate  to select **Other Function**, then press .
 - ▶ Repeat the procedure to select **Search**.
3. Move  and  to select the upper and lower part of the screen.
4. In the upper part, rotate  to search for a title, then press .
In the lower part, rotate  to search for a chapter, then press .

Number Input:

Enters a three digit number, if issued to the DVD, to find the segment you want to start to play.







1. Press the **MENU** button to display **Menu** in front.
2. Rotate  to select **Other Function**, then press .
 - ▶ Repeat the procedure to select **Number Input**.
3. Rotate  to select number(s), then press .
4. Rotate  to select **OK**, then press .

▶▶ DVD setup from the front panel

If the DVD currently playing does not carry multiple angles, only one option **Angle 1** comes on.







Rear Control:

Disables controls from the remote.

1. Press the **SETTINGS** button to display **Settings menu** in front.
2. Rotate  to select **Rear Ent Settings**, then press .
3. Rotate  to select **Rear Control**, then press .
4. Rotate  to select **On** or **Off**, then press .

Rear Speaker:

 
Mutes the sounds from the rear speakers.

1. Press the **SETTINGS** button to display **Settings menu** in front.
2. Rotate  to select **Rear Ent Settings**, then press .
3. Rotate  to select **Rear Speaker**, then press .
4. Rotate  to select **On** or **Off**, then press .

■ TITLE/SCROLL button on the remote

Press the **TITLE/SCROLL** button while the DVD is playing to see the current status of title, chapter, elapsed time, angle, subtitle, audio, and sound characteristics.

■ MENU button on the remote

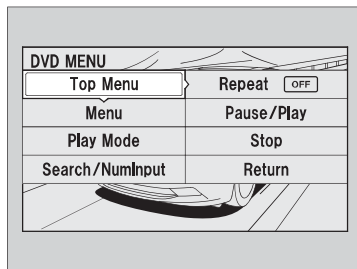

Press the **MENU** button while the DVD is playing to see the available options. Use the **▲**, **▼**, **▶**, and **◀** buttons to highlight the option and then press the **ENTER** button.

▶ TITLE/SCROLL button on the remote

Press the **TITLE/SCROLL** button again to return.

Top Menu:

The top page of the DVD's title menu appears. The title menu also appears when you press the **MENU** button while the DVD is in the slot not playing. Press the **CANCEL** or **MENU** button to return.

Menu:

The DVD's title menu appears.

Play Mode:

You can change the following three settings:

-
- Audio - Select a language for audio that is available on the DVD. The sound characteristics (Dolby Digital, LPCM, MPEG Audio, dts, etc) of that audio is also displayed.
 - Subtitle - Select a subtitle that is available on the DVD.
 - Angle - Select a view angle that is available on the DVD. If the DVD currently playing does not carry multiple angles, only one option **Angle 1** comes on. Press the **CANCEL** or **MENU** button to return.
-

When the DVD is not playing

If you press the **MENU** button while the DVD is not playing, the option **Play Mode** changes to **Initial Settings**.

Initial Settings:

You can configure the initial Language, Dynamic Range, and Angle Mark settings before playing DVD.

Language - Select the language for the DVD's displayed menus (Menu Language), Settings - the DVD's audio (Audio Language), and the DVD's subtitle (Subtitle Language).

1. Select the language setting.
2. Select the language from **English, French, Spanish, Arabic, German, Italian, Dutch, Chinese, Korean, Thai, Japanese,** and **other**.
3. If you select other, you need to enter the four digit language code number to configure the language that is not listed. Select Yes to go to the number input screen.
 - ▶ To return to the language **Setting screen**, select No.
4. Press the **ENTER** button each time you input digit.
 - ▶ If you want to delete a number, select **DEL**.
5. The cursor automatically goes to **ENT** after you input four digits. Press the **ENTER** button to command.

Dynamic Range - The feature reduces the difference between the loud and quiet sound levels. Select **ON** or **OFF**.

Angle Mark - You can select whether to display the angle mark appearing in the upper right corner of the screen when you change the view angle while the DVD is playing. Select **ON** or **OFF**.

▶▶ MENU button on the remote

Initial Settings:

The prior language varies by disc. You may not be able to configure your selected language setting.

Search:

You can search for a DVD segment from the following methods.


Title Search -	Select the title you want to play.
Chapter Search -	Select the chapter you want to play.
NumInput -	Enter a three digit number, if issued to the DVD, to find the segment you want to start to play.

1. Select **NumInput** to go to the number input screen.
2. Use the ▲, ▼, ▶, and ◀ buttons to input numbers.
 - ▶ If you want to delete a number, select **DEL**.
3. The cursor automatically goes to **ENT** after you input three digits. Press the **ENTER** button to command.

Repeat:

Highlight this option and press the **ENTER** button to change the repeat mode from chapter repeat and title repeat, to repeat off.

 ■ SETUP button on the remote

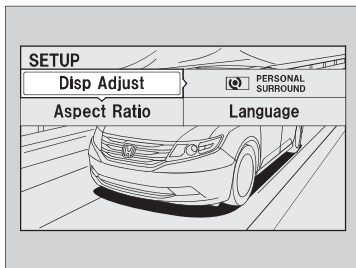

Press the **SETUP** button while the DVD is playing to see the available options. Use the **▲**, **▼**, **▶**, and **◀** buttons to highlight the option and then press the **ENTER** button.

Disp Adjust:

You can adjust the overhead screen's brightness, contrast, black level, color, and tint. To return to the default display setting, select **Reset**.

After you make all the adjustments, the screen goes back to the top **SETUP** screen, or press the **CANCEL** button to return.

Aspect Ratio:

You can select the screen mode with a different aspect ratio from Normal, Wide, Zoom and Full. After you select the mode, it takes about one second to return to the play mode with the selected ratio.

Personal Surround:

You can select the sound effect mode that fits the DVD's audio source from Music, Cinema, and Voice. Select Off to turn this feature off.

Language:

You can select the display language from **English**, **French**, and **Spanish**.

When the DVD is not playing

 
You can select the audio language from **English**, **French**, and **Spanish**.

Appearance:


You can select the screen color from **white**, **black**, **blue**, **brown**, and **red**.

System Controls and Menus for Audio

Remote with XM button

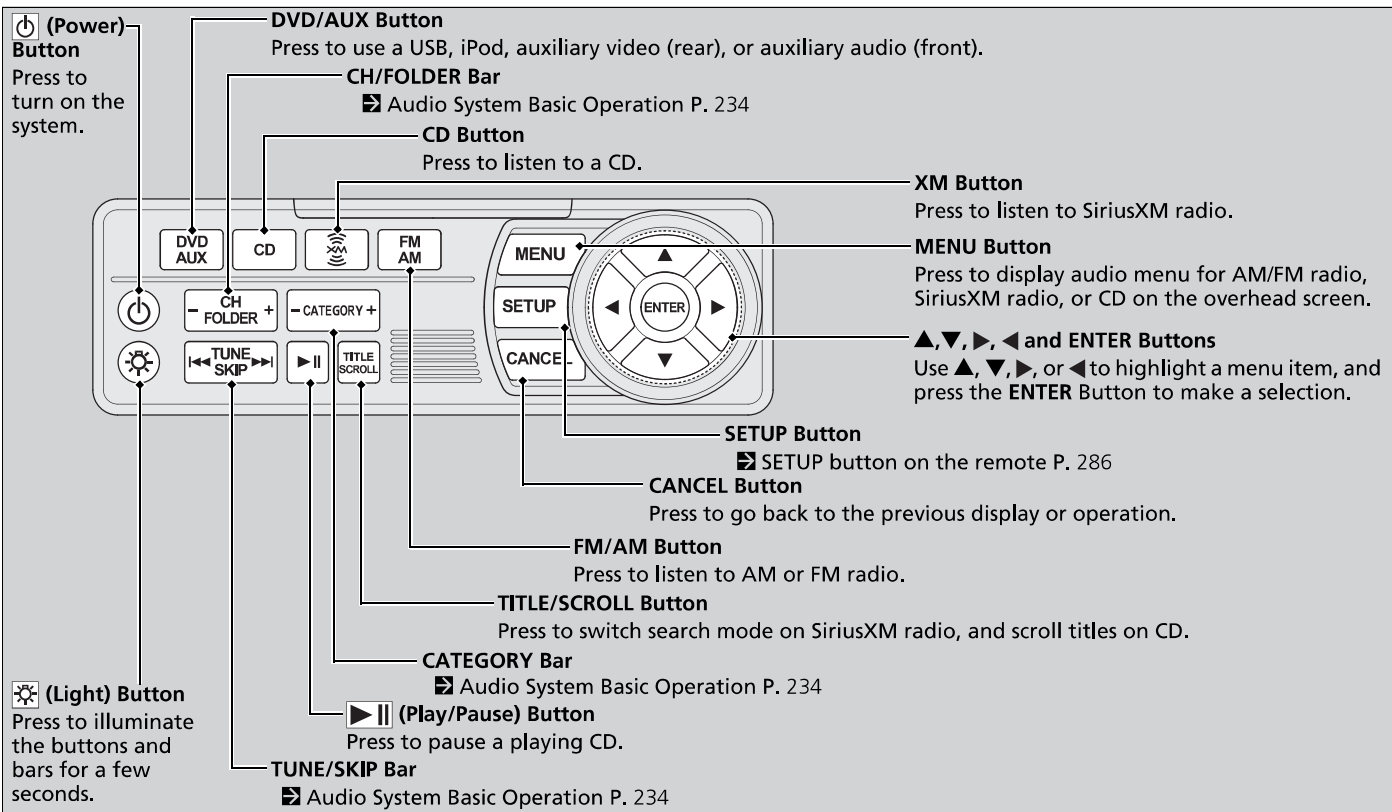

Remote without XM button

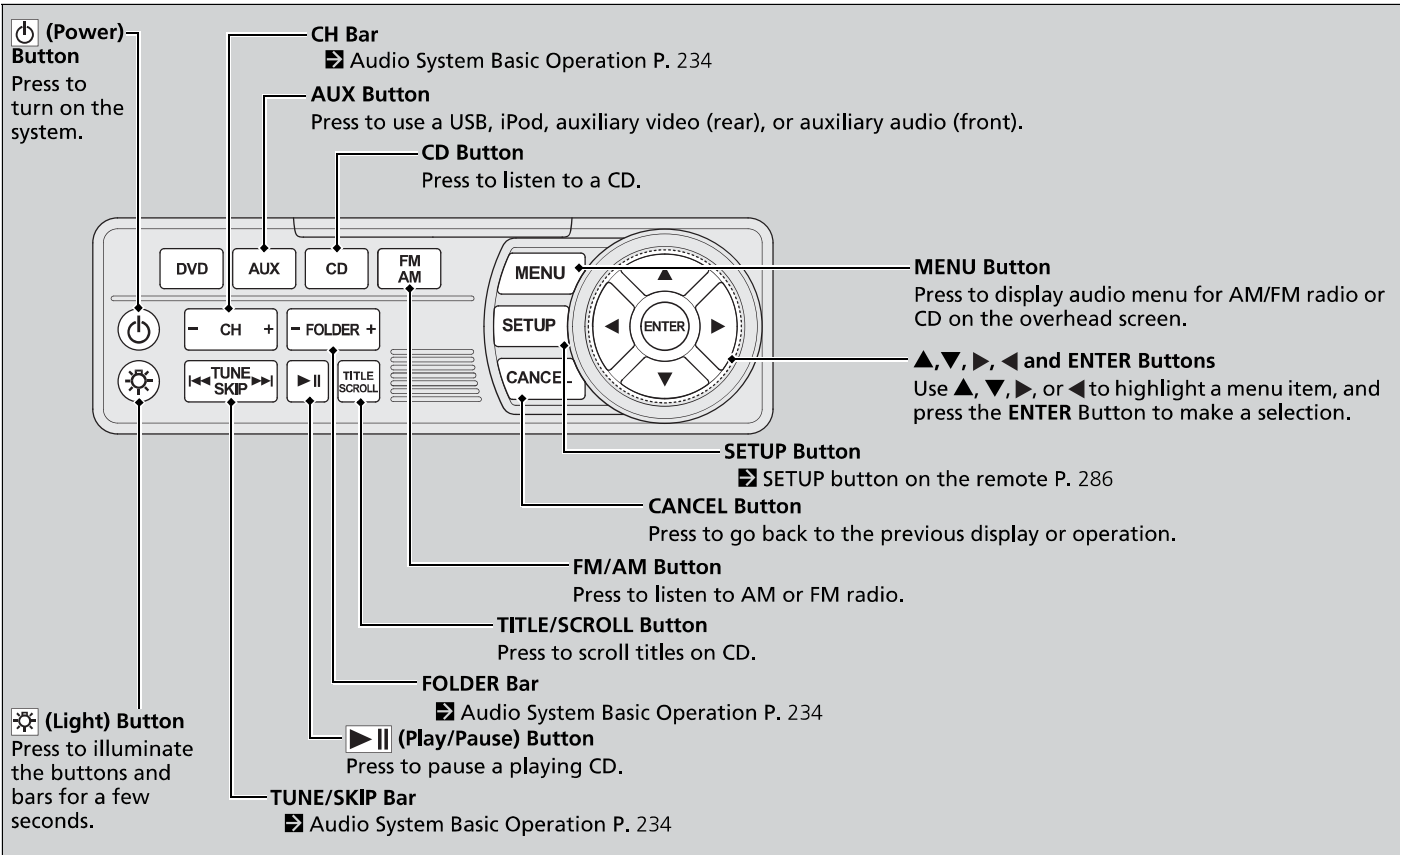 

■ Playing AM/FM radio in the rear

Press the **AM/FM** button.

When you press the **MENU** button while the radio is playing, the audio menu appears on the overhead screen. The available functions are the same as those of the front audio system. The **TUNE/SKIP** bar on the control panel works the same as the Skip/Seek icons (◀◀/▶▶) on the front touchscreen for AM/FM radio operation.

➤ **Playing AM/FM Radio** P. 245

■ Playing SiriusXM radio in the rear

Press the **XM** button.

When you press the **MENU** button while the radio is playing, the audio menu appears on the overhead screen. The available functions are the same as those of the front audio system. The **TUNE/SKIP** bar on the control panel works the same as the Skip/Seek icons (◀◀/▶▶) on the front touchscreen for SiriusXM radio operation.

➤ **Playing SiriusXM® Radio*** P. 249

To change the mode between category and channel, press and hold the **TITLE/SCROLL** button for five seconds.

▶▶ System Controls and Menus for Audio

If you press the **REAR AUDIO** button on the front panel, you can operate the rear entertainment system from the front display.

➤ **REAR AUDIO button on the front panel**

P. 277

■ Playing a CD

Press the **CD** button.

The available options appear on the overhead screen are Repeat, Random, and Scan. These functions are the same as those of the front audio system.

➤ **Playing a CD** P. 252

To scroll your audio data title, press the **TITLE/SCROLL** button for five seconds.

■ Playing iPod and a USB flash drive

Remote with XM button

Press the **DVD/AUX** button.

Remote without XM button

Press the **AUX** button.

The available options appear on the overhead screen are Repeat, Random, and Scan. These functions are the same as those of the front audio system.

➤ **Playing an iPod** P. 255

➤ **Playing a USB Flash Drive** P. 262

To scroll your audio data title, press the **TITLE/SCROLL** button for five seconds.

▶▶ System Controls and Menus for Audio

You can also insert an audio CD compatible with the system, or recorded in MP3/WMA/AAC formats into the lower slot and play. The front passengers can listen to the same CD, or select another audio source.

➤ **Playable Discs** P. 293

➤ **Audio Sources for Front and Rear Seats**
P. 292

Audio Sources for Front and Rear Seats

The table shows the possible audio source combinations of the front audio system and rear entertainment system's simultaneous use.

Front Rear	AM/FM Radio	SiriusXM® Radio*	CD	DVD* ¹	USB iPod	Bluetooth® Audio	Pandora®* Aha™*
AM/FM Radio	Yes	Yes	Yes	Yes	Yes	Yes	Yes
SiriusXM® Radio*	Yes	Yes	Yes	Yes	Yes	No	No
CD	Yes	Yes	Yes	Yes	Yes	Yes	Yes
DVD	Yes	Yes	Yes	Yes	Yes	Yes	Yes
USB iPod	Yes	Yes	Yes	Yes	Yes	Yes	Yes

*1: The front seat passengers are only able to hear the DVD's sound from the front speakers.

▶▶ Audio Sources for Front and Rear Seats

Yes: These audio sources are simultaneously playable. When listening to same source in both the front and rear, the playing channel or track will also be the same for each.

No: These audio sources are not simultaneously playable.

Playable Discs



The discs that come with these labels can be played in your vehicle's rear entertainment system.

Also look for the region code of 1 or ALL on the package or jacket on the disc.






DVD-ROMs are not playable in this unit.

▶▶ Playable Discs

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, MLP Lossless and the double-D symbol are trademarks of Dolby Laboratories.

DVD Player Error Messages

If a disc error occurs, you may see the following error messages.

Error Message	Cause	Solution
Unplayable File	Track/file format not supported	<ul style="list-style-type: none"> • Current track/file will be skipped. The next supported track/file plays automatically.
Bad Disc Please Check Owner's Manual Push Eject	Mechanical error	<ul style="list-style-type: none"> • Press the  (eject) button and remove the disc, and check that the error message is cleared. • Check that the disc is not damaged or deformed, and insert the disc again.
Mecha Error		<ul style="list-style-type: none"> •  Protecting CDs P. 274
Bad Disc Please Check Owner's Manual	Servo error	<ul style="list-style-type: none"> • If the error message reappears, press the  button, and pull out the disc. • Insert a different disc. If the new disc plays, there is a problem with the first disc. • If the error message repeats, or the disc cannot be removed, contact a dealer. Do not try to force the disc out of the player.
Check Disc	Disc error	<ul style="list-style-type: none"> • Check that the disc is not damaged or deformed. <p> Protecting CDs P. 274</p>
Heat Error	High temperature	<ul style="list-style-type: none"> • Turn the audio system off and allow the player to cool down until the error message is cleared.
The mode selected is restricted in this system. Please select another mode.	Unavailable source selected	<p>Review the table of the possible audio source combinations of the front audio system and rear entertainment system's simultaneous use.</p> <p> Audio Sources for Front and Rear Seats P. 292</p>